











 <p>ITEM:105032 BOBBIN CASE FITS SINGER 206K, 306K, 319</p>	 <p>ITEM:125291 BOBBIN CASE FIT SINGER 15-90 15-91, 177</p>	 <p>ITEM:173058 BOBBIN CASE FIT SINGER 206W, 306W, 319</p>
 <p>ITEM:4011530 BOBBIN CASE FITS VIKING 21, 180, 6010, 6020, 6030</p>	 <p>ITEM:45751 BOBBIN CASE FITS SINGER 221, 301</p>	 <p>ITEM:541678 BOBBIN CASE FITS SINGER 20U</p>
 <p>ITEM:9076M BOBBIN CASE FITS PFAFF 130</p>	 <p>ITEM:91-105544-91 BOBBIN CASE FITS PFAFF 1475, 7550</p>	 <p>ITEM:H12405000 BOBBIN CASE FITS ELNA 1400 RICCAR RM540</p>

		
<p>ITEM:JO1313 BOBBIN CASE WITH 11MM SLOT FITS SINGER 15-87, 15-96, 237 CONSEW 18, 118</p>	<p>ITEM:JO1313Z2 BOBBIN CASE FITS BROTHER XL700, XL702 ALL RICAR ROTARY MACHINE</p>	<p>ITEM:JO1313Z3 BOBBIN CASE WITH 13MM ZZ SLOT FITS BABY LOCK BL702 BL722, BL713 BABY LOCK</p>
 <p>ITEM:2515Z OSCILLATING HOOK WITH LONGER FINGER 11MM SLOT FITS ELNA 200, 220, 230, BABY LOCK BL200, BL1500</p>		